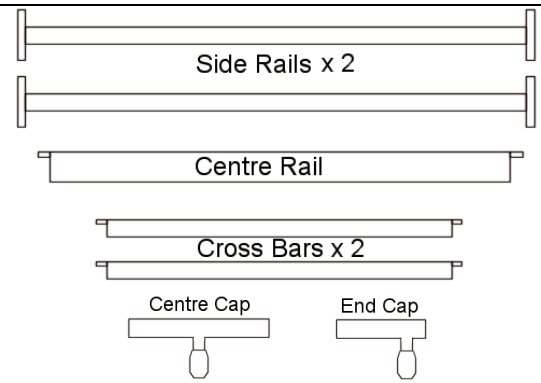
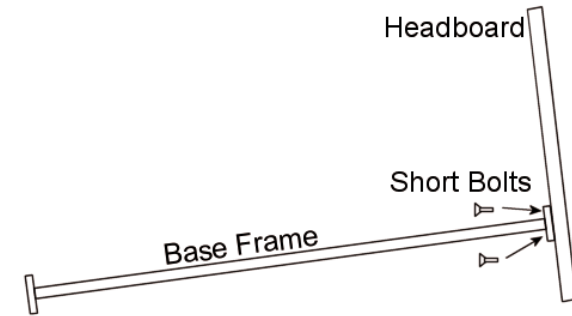
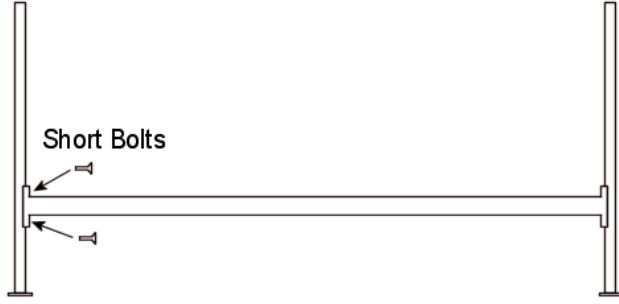
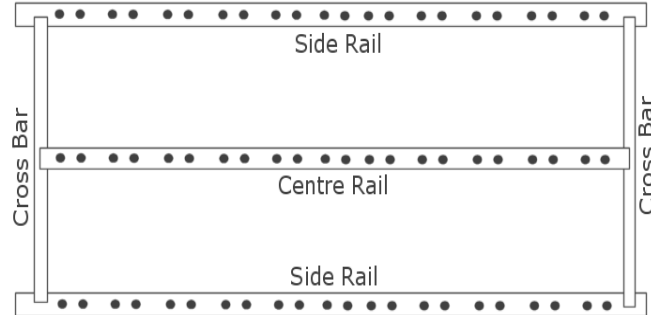





Nights In Iron - BED ASSEMBLY INSTRUCTIONS

<p style="text-align: center;">You should have the following parts: (Per bed ordered)</p> <table style="width: 100%; border: none;"> <tr> <td style="width: 50%;">Headboard</td> <td>Slats x 2 Bundles</td> </tr> <tr> <td>Footboard</td> <td>Plastic Centre Caps</td> </tr> <tr> <td>Side Rails x 2</td> <td>Plastic End Caps</td> </tr> <tr> <td>Centre Rail</td> <td>Long Bolts x 6 (in base ends)</td> </tr> <tr> <td>Cross Rails x 2</td> <td>Short Bolts x 8 (in bed frames)</td> </tr> <tr> <td></td> <td>Balls x 4 (to push in bed ends)</td> </tr> <tr> <td></td> <td>Allen Key (To assemble the bed – can be found taped to one end of the side rails)</td> </tr> </table>	Headboard	Slats x 2 Bundles	Footboard	Plastic Centre Caps	Side Rails x 2	Plastic End Caps	Centre Rail	Long Bolts x 6 (in base ends)	Cross Rails x 2	Short Bolts x 8 (in bed frames)		Balls x 4 (to push in bed ends)		Allen Key (To assemble the bed – can be found taped to one end of the side rails)	 <p style="text-align: center;">Side Rails x 2</p> <p style="text-align: center;">Centre Rail</p> <p style="text-align: center;">Cross Bars x 2</p> <p style="text-align: center;">Centre Cap End Cap</p>
Headboard	Slats x 2 Bundles														
Footboard	Plastic Centre Caps														
Side Rails x 2	Plastic End Caps														
Centre Rail	Long Bolts x 6 (in base ends)														
Cross Rails x 2	Short Bolts x 8 (in bed frames)														
	Balls x 4 (to push in bed ends)														
	Allen Key (To assemble the bed – can be found taped to one end of the side rails)														

Please note that the bolts have been inserted into their respective holes prior to leaving the forge. This ensures all threads are good and that the correct number of bolts have been sent. Allow approx 1 hour to unpack and assemble your bed.

Lean the bed head against the wall where the bed will sit.
Remove all bolts from bed ends, centre rail and cross bars.

<p>1) Tilt the bed head forward whilst raising the rail to the bolt holes in the bed head. Using the short bolts, bolt the two side rails to the Headboard loosely.</p> <p><i>Do not tighten bolts</i></p>	 <p style="text-align: right;">Headboard</p> <p style="text-align: center;">Short Bolts</p> <p style="text-align: center;">Base Frame</p>
<p>2) Lift Footboard end of rails and bolt to footboard with four short bolts, loosely.</p> <p><i>Do not tighten bolts</i></p>	 <p style="text-align: center;">Short Bolts</p>
<p>3) Using the long bolts, loosely bolt the two cross bars into the rails and then loosely bolt the centre rail to form the frame shown opposite.</p>	 <p style="text-align: center;">Side Rail</p> <p style="text-align: center;">Centre Rail</p> <p style="text-align: center;">Side Rail</p> <p style="text-align: center;">Cross Bar Cross Bar</p>
<p>Make sure the bed is square and tighten bolts, ensuring you do not over-tighten any of them.</p>	
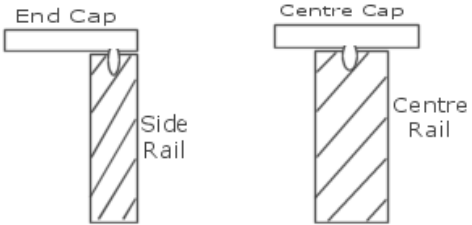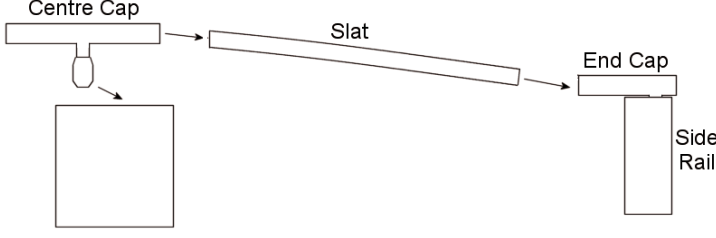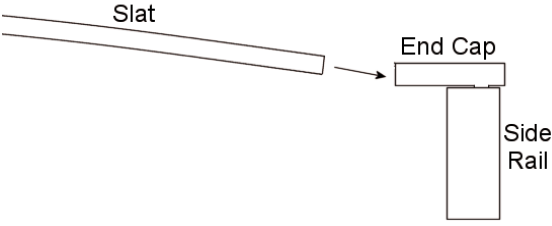
<p>Cap Positioning</p>	
<p>Push fit into the centre rail all the black double ended caps. (Fitting Tip: Take 1 wooden slat & slide the centre cap onto one end. Then line up with the appropriate pair of drilled holes in the centre rail and push down hard on it with your hand. Remove the slat from the cap and repeat with remaining caps)</p>	
<p>Take the bed slats (curve upwards) & push the end caps onto one end. Slot each slat into centre cap (already in centre rail) line up other end cap with appropriate holes in side rail and push down hard on top with your hand. Repeat for other side.</p>	
<p>Bed Balls should be moderately tight fitting in the bed posts but still removable, in case you decide to add a four poster section later. To achieve the right fit you may need to remove one or both of the rubber rings on the base stem of the balls.</p>	